Exterior Sheathing With An Integrated Weather Barrier

Install just like standard OSB or plywood sheathing, then tape the seams.

1. Laminated Air & Water Barrier


The ForceField overlay is locked to the panel with an even and consistent distribution of adhesive to maintain a secure fit, even after the panel is cut.

2. Vapor Permeable System

The proprietary vapor permeable smooth-side overlay creates a barrier that keeps water out, but allows water vapor to escape.

3. Structural Wood Sheathing

ForceField starts with our overlay adhered to the smooth side of our premium quality OSB panels with no core voids, knots or splits and edge seal to help prevent moisture intrusion.

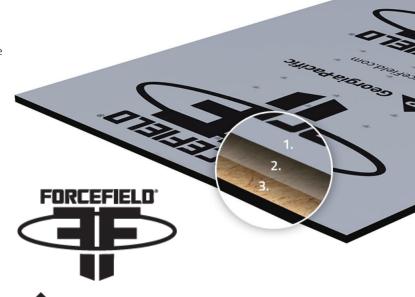



Installs Up To 37% Faster Than House Wrap

Because ForceField panels already provide an integrated air and water barrier, you don't have to add the extra step of installing house wrap. Once the seams are taped, you're done.

Structure is Protected Immediately Upon Installation

No more worries about whether it's going to rain on your exposed panels or not. ForceField installs easily and starts protecting the moment they are up. Even its edge seal helps reduce water intrusion which could lead to moisture-related problems.

Installs Just Like OSB or Plywood

No additional training or installation techniques are needed. Simply cut as needed and install just like you would any other OSB or plywood.

The Smooth Side is the Secret

ForceField panels have a high quality engineered wood substrate. Because the overlay is adhered to the smooth side of the OSB panel, it allows for thinner, easier to install seam tape. So it's less complicated for flashing and finishing of window, door and other details than house wrap.